




Features

- Counts down
- Stop and restart
- Food-safe ABS plastic
- 3-way mounting: pocket clip/magnet/stand
- Battery and instructions included

Note: Remove sticker from display before use.

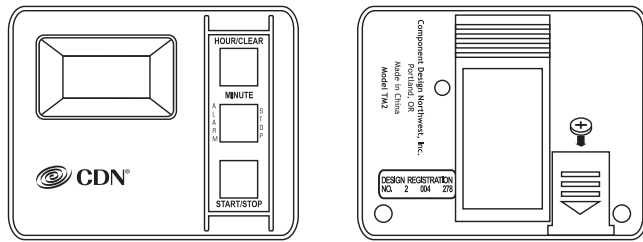

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in BOLD CAPS.

Battery Installation

Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery cover on the back by sliding it in the direction of the arrow.
2. Install one LR44 battery, positive (+) side up. A brief alarm sounds.
3. Replace the battery cover until it clicks shut.

Operating Instructions

A. Count Down

1. Press the HOUR and/or MINUTE buttons to enter the desired time. Press and hold for fast advance.
2. Press the START/STOP button to start counting down. The COLON (:) flashes on the display. The last minute counts down in seconds.

3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. The alarm sounds for 30 seconds when the count reaches 0:00.
5. Press ALARM STOP to stop the alarm.
6. Press CLEAR to reset to 0:00.

Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

CE Note: This device could be sensitive to electrostatic discharge. If electrostatic discharge or malfunctioning occurs, please re-install the battery to reset this unit.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Component Design Northwest, Inc.
 PO Box 10947
 Portland, OR 97296-0947
 Tel 800 338-5594
 Fax 800 879-2364
 info@cdn-timeandtemp.com
 www.cdn-timeandtemp.com

